

# Pour Mold Instructions

## RidgeView – Below Grade Exterior Fin

Window must be cleaned with isopropyl alcohol and free of any dirt.




Rough opening should be smooth and cleared of debris and concrete chips, and smoothed flat.



Dry fit window in opening, checking for level. If not level, shim accordingly.

After leveling, remove dry fit window from opening and apply generous silicone bead (3/8" dia) along four sides with an extra bead (1/2" dia) at sill.

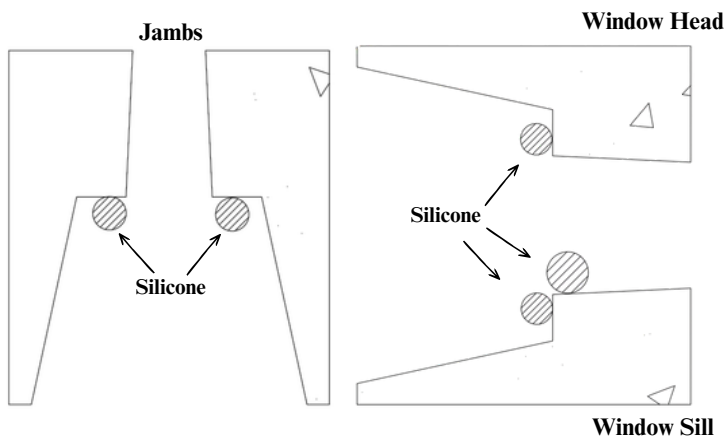


Place window into opening, pressing the silicone beads flat, assuring a water-tight seal and level window.




Shim at fastener locations if gap exceeds 1/8" to assure window is level. Do not over-tighten Tap-Con.

Center window in opening and make sure jambs are plumb. Fasten with (2) Tap-Con (or equal) at jambs (holes provided for outside leg window) for outside leg, or through inside leg.


Window Head

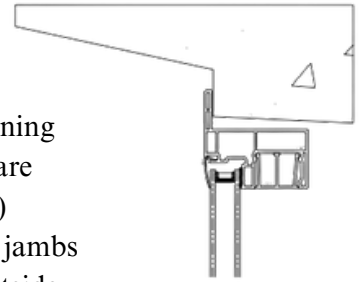

Exterior/Outside Leg

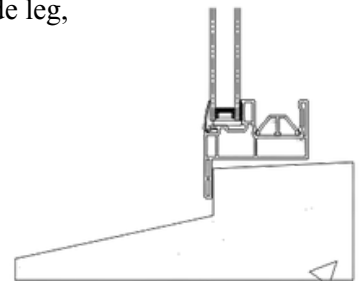

Window Sill

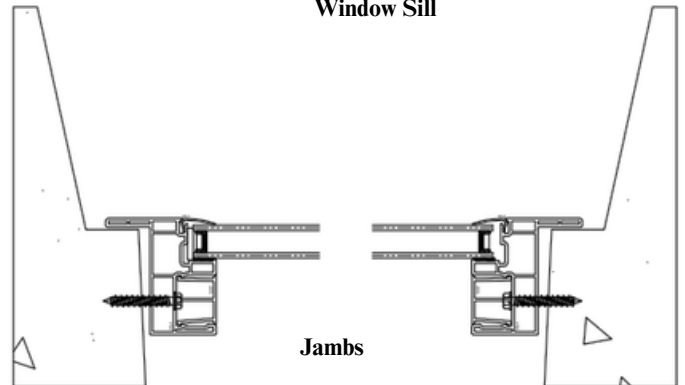

Jambs

